


# #36-0030 SERIES FOLDABLE LCD ARM USER GUIDE

## Recommended load capacity

Please check the weight of your LCD panel and make sure its weight is suitable for the arm loading range.

\* #26-31-52 weight capacity 2kgs to 7.0kgs.

\* If #36-0039 long vertical pin pivot head is used. The weight capacity shall reduce 1kgs.

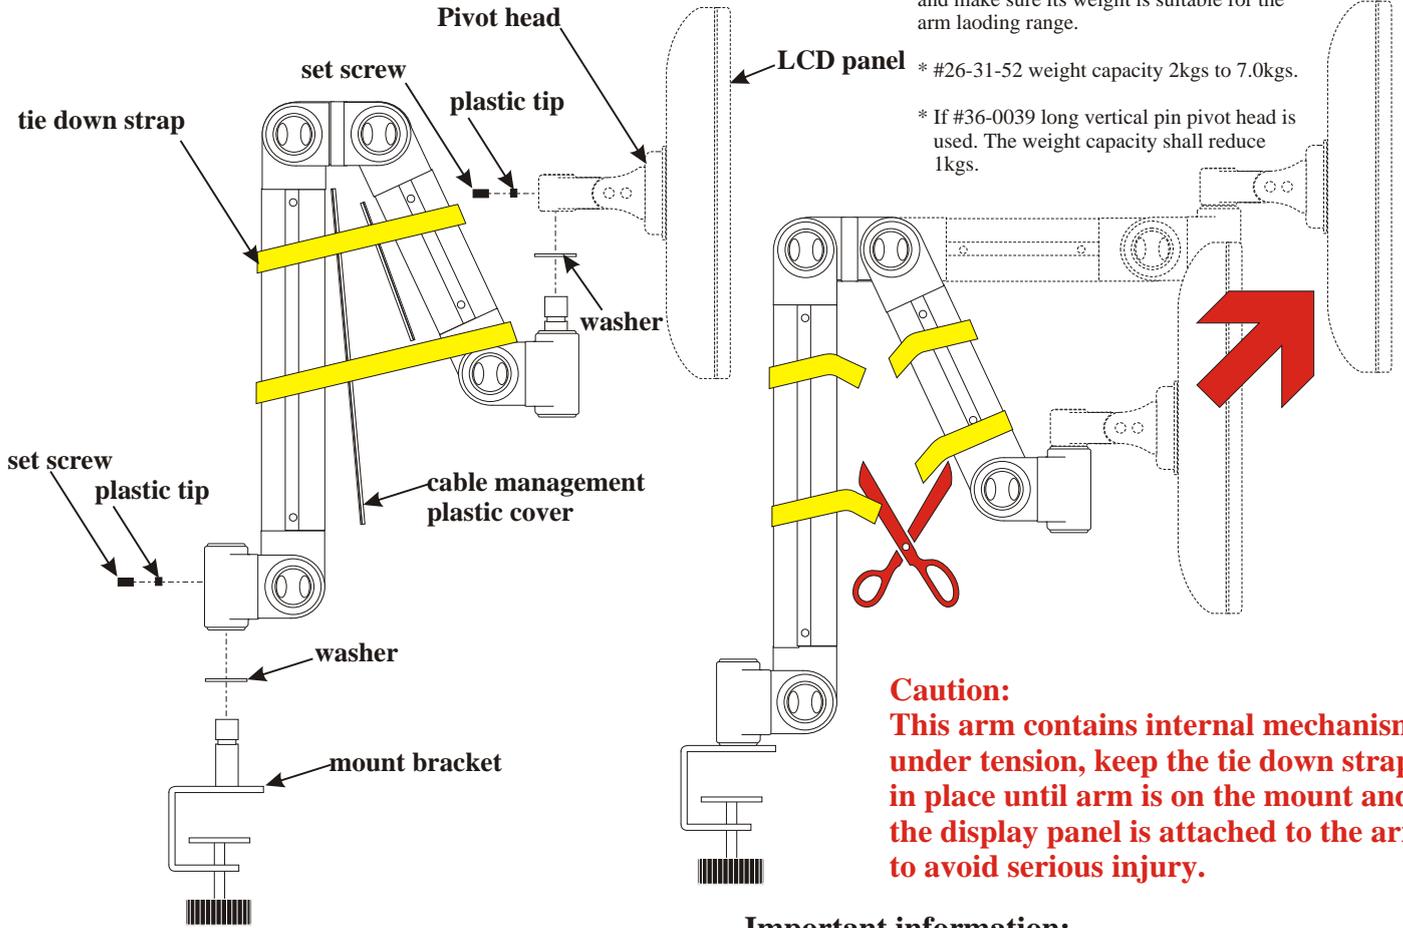


**Caution:**  
This arm contains internal mechanisms under tension, keep the tie down straps in place until arm is on the mount and the display panel is attached to the arm to avoid serious injury.

## Important information:

- \* To install mounting bracket first.
- \* To mount the foldable arm on the bracket.
- \* Use the 3mm hex key wrench to turn the set screw slightly tight.
- \* To screw pivot head on the back side of LCD.
- \* To mount the pivot head and LCD on the swivel pin on the top of the forearm.
- \* Use the 3mm hex key wrench to turn the set screw slightly tight.

<p>#36-0034 Stationary base</p>	<p>#36-0035/36 Pole clamp</p>
<p>#36-0037 Grommet mount</p>	<p>#36-0033 2 in 1 mount</p>
<p>VESA 75mm to VESA 100mm conversion plate installation guide</p> <p>36-0015</p>	

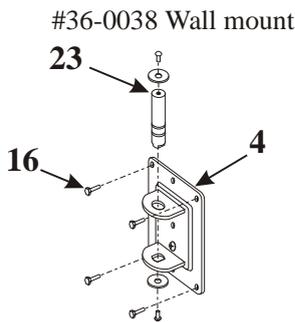

## PARTS:

2. M4 x 10mm screw
4. Mount bracket
8. C-Clamp
15. Hex screw set
16. Anchor screw
17. M4 Nut
18. VESA 100mm conversion plate (optional)
19. Flat tape head screw
20. Grommet mount (3/8" bolt)
22. Your LCD panel
23. Arm swivel pin