


Quick Start Guide

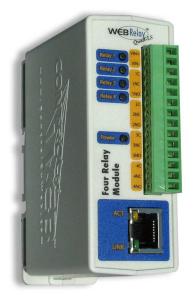

power supply Vin(gnd) 1c 1NC 1NC 1NO 2C 2NC 2NO 3NC 3NO 3NO 4C 4NO

DC Power Supply Input (+)
DC Power Supply Input (-)

Relay 1 Common

Relay 1 Normally Closed
Relay 1 Normally Open

Relay 2 Common

Relay 2 Normally Closed Relay 2 Normally Open

Relay 3 Common

Relay 3 Normally Closed Relay 3 Normally Open

Relay 4 Common

Relay 4 Normally Closed Relay 4 Normally Open

Basic Setup Steps:

- (1) Connect unit to power and network only.
- (2) Set up a computer on the same network to configure WebRelay-Quad TM . To do this, set the IP address of the computer to 192.168.1.50 with a netmask of 255.255.255.0.
- (3) Configure WebRelay-Quad™ using web browser. Do this by pointing browser to http://192.168.1.2/setup.html.

Password is webrelay (all lower case).

(4) Set the permanent IP address in the configuration page. Restart WebRelay-Quad ™ (remove power, re-apply power).

After restarting the unit, set your computer back to it's original settings and access WebRelay™ at its new IP address.

(5) Connect relay contacts.

Factory Default Settings

IP Address: 192.168.1.2 Subnet Mask: 255.255.255.0

Control Web Address: http://192.168.1.2

Setup Web Address: http://192.168.1.2/setup.html

Username: no username required Control Password: no password set

Setup Password: webrelay (all lower case)

Note: WebRelay-Quad™ can be configured to operate at 10Mbps or 100Mbps. For best power savings and long term performance the 10Mbps setting is recommended



Direktronik AB tel. 08-52 400 700 www.direktronik.se



a division of... Xytronix Research & Design, Inc. North Logan, Utah, USA