



## X-320™/ X-320M™ Quick Start Guide

### Basic Setup Steps:


- (1) Connect the module to power and a network.
  - (2) Set up a computer on the same network as the module. To do this, set the IP address of the computer to 192.168.1.50 with a netmask of 255.255.255.0.
  - (3) Configure the module using a web browser. Do this by pointing the browser to <http://192.168.1.2/setup.html>. Username is **admin** and password is **webrelay** (all lower case).
  - (4) Set the permanent IP address in the configuration page. Restart the module (remove power, re-apply power).
- After restarting the module, set the computer back to its original settings and access the module at its new IP address.

### Factory Default Settings


IP Address: 192.168.1.2  
 Subnet Mask: 255.255.255.0  
 Control Web Address: <http://192.168.1.2>  
 Setup Web Address: <http://192.168.1.2/setup.html>  
 Setup Username: admin  
 Setup Password: webrelay (all lower case)  
 Control Password: no password set

Full Users Manual may be downloaded from  
<http://www.ControlByWeb.com>

For technical support, email questions to  
[support@ControlByWeb.com](mailto:support@ControlByWeb.com)

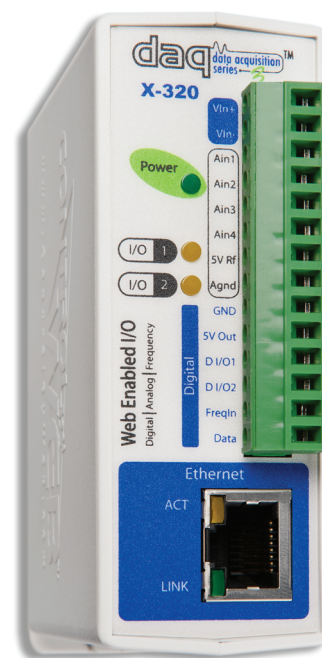

### Pinout

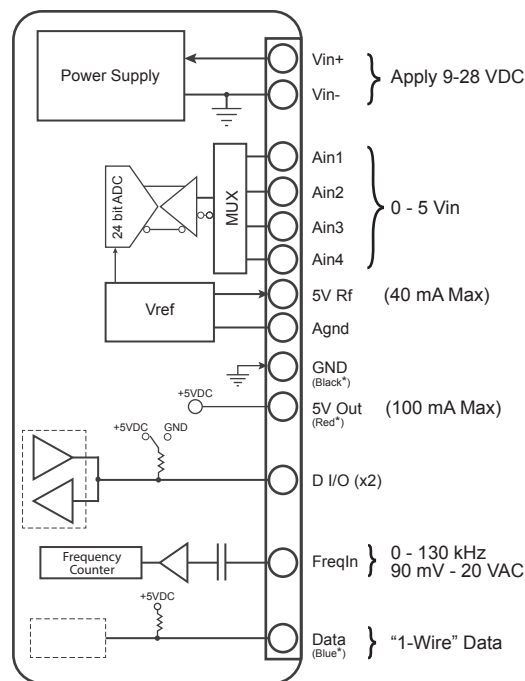

\* 1-Wire Temperature Sensor Connections

**CONTROL by WEB**  
[www.ControlByWeb.com](http://www.ControlByWeb.com)

a division of...  
**Xytronix Research & Design, Inc.**  
 Nibley, Utah, USA