


Keystone Jack Installing Instruction


KJ15 series

1

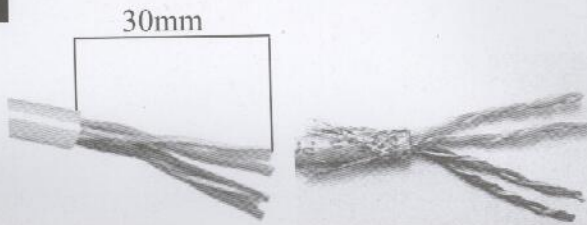

Strip approximately 30mm of the cable jacket, and separate to 4 pair each.
Attn: Suitable for 23~24 AWG Solid Wire

2

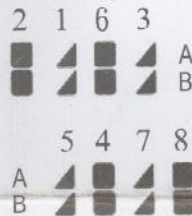

Colored Sticker


T568A

Pin 1 White/Green
 Pin 2 Green
 Pin 3 White/Orange
 Pin 4 Blue
 Pin 5 White/Blue
 Pin 6 Orange
 Pin 7 White/Brown
 Pin 8 Brown

T568B

Pin 1 White/Orange
 Pin 2 Orange
 Pin 3 White/Green
 Pin 4 Blue
 Pin 5 White/Blue
 Pin 6 Green
 Pin 7 White/Brown
 Pin 8 Brown

3

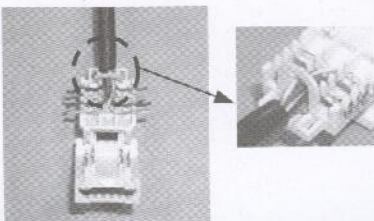


Follow the direction on the plastic lid color-coding to position T568A or T568B wiring, separate a little space on proper position and insert the wire pair by pair into each slot.

4



Plug the easy tool into upper hole, then press down to close plastic lid to connect the wires.


5

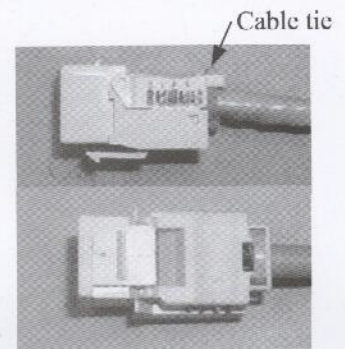

Complete the installation.

Unshielded type

3

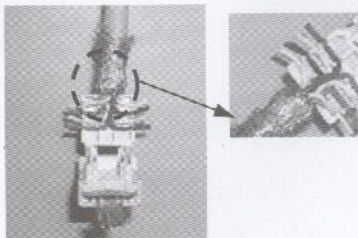


Follow the direction on the plastic lid color-coding to position T568A or T568B wiring, separate a little space on proper position and insert the wire pair by pair into each slot.

4




Plug the easy tool into upper hole, then press down to close plastic lid to connect the wires.

5

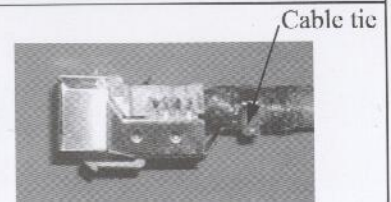

Half Shielded

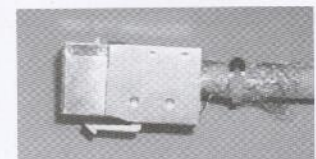

Fully Shielded

Insert the cable tie to tight up the cable jacket. Then complete the installation.

Shielded type