

## Cat.5 Flash Mounting Wall Plate Installing Instruction






A. Load down Name Plate, and Taping Screws step by step.

B. Strip approx 30-35mm of the cable jacket. Then insert the cable jacket direct into "Cable Clamp", using "plier" bending to hold tightly.

C. Load the twisted pairs to the connection point (untwisted section can be a max.13mm), using the impact tool to terminate the wire according to the color coding T568A or T568B printed on "krone terminal block".

D. Place the Upper Cover , Screws, Name Plate.

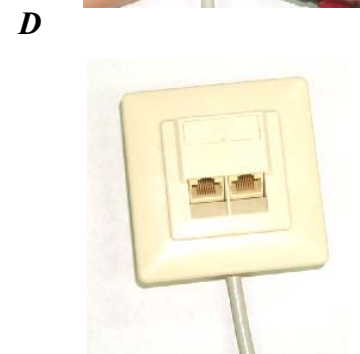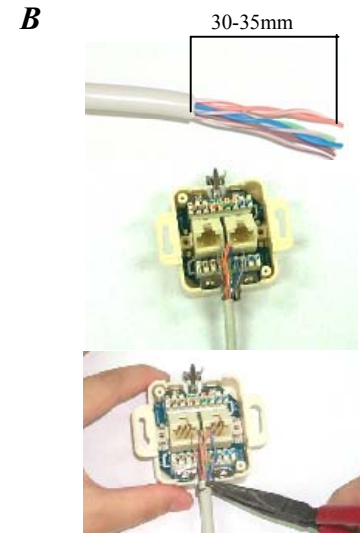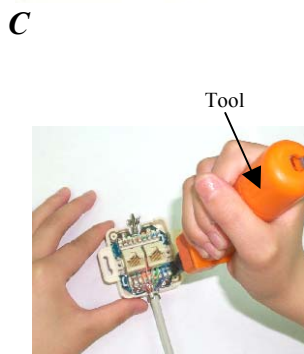

Completed

**DIREKTRONIK**

e-mail: [info@direktronik.se](mailto:info@direktronik.se)

tel: 08-52 400 700 fax: 08-520 18121