



# Cat.5e Keystone Jack Installing Instruction

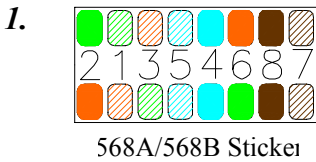

Strip approximately 30mm of the cable jacket, and separate to 4 pair each.


| <u>T568A WIRING</u> | <u>T568B WIRING</u> |
|---------------------|---------------------|
| Pin 1 White/Green   | Pin 1 White/Orange  |
| Pin 2 Green         | Pin 2 Orange        |
| Pin 3 White/Orange  | Pin 3 White/Green   |
| Pin 4 Blue          | Pin 4 Blue          |
| Pin 5 White/Blue    | Pin 5 White/Blue    |
| Pin 6 Orange        | Pin 6 Green         |
| Pin 7 White/Brown   | Pin 7 White/Brown   |
| Pin 8 Brown         | Pin 8 Brown         |

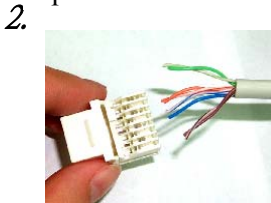


Slide the cable jacket into Cable Holder



Follow the direction on the color coding sticker into position of T568A or T568B wiring , separate a little space on proper position and insert the 4 pair wires into the slot , then keep the twist as near IDC as possible.

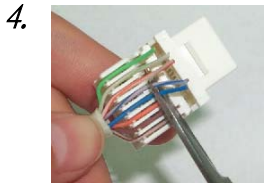


Use the wire cutter to cut off the extra wiring onto each conductor.

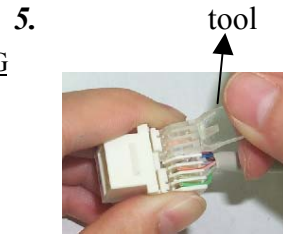


tool

Snap the Tool and press the wires to connect the IDC termination

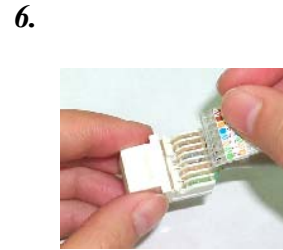

Snap the cap and push to lock the wires

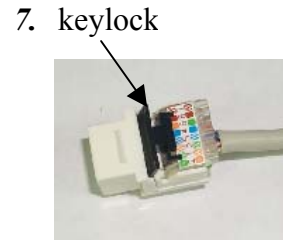

Insert the keylock to lock the Cap and use the Cable-Tie to tight the cable on Cable Holder, then complete the installaion.

**DIREKTRONIK**

e-mail: info@direktronik.se  
tel: 08-52 400 700 fax: 08-520 18121