


Cat.5 Keystone Jack Installing Instruction

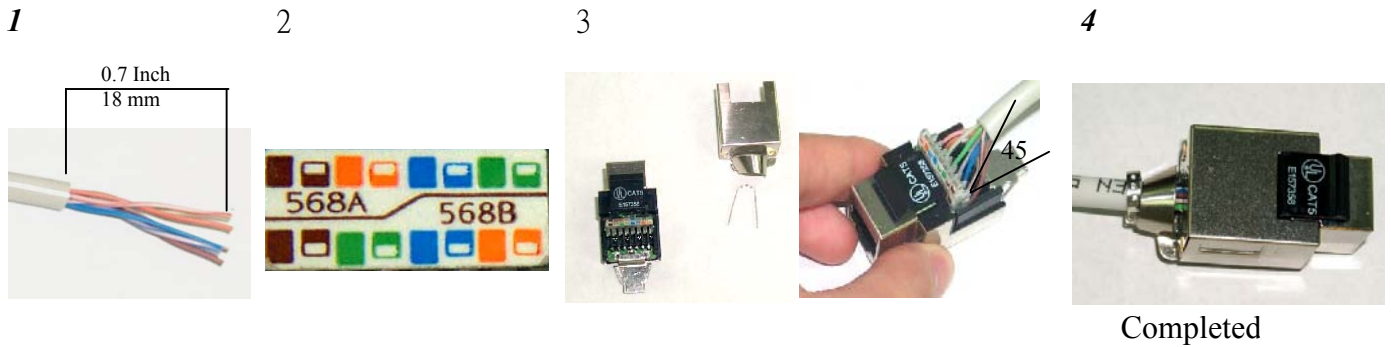

Completed

1. Strip approximately 18-20 mm of the cable jacket. Drain wire fold back to be shielding .
2. Follow the direction on the color coding sticker to position T568A or T568B wiring.
3. Open the cover by your thumb. Insert the wires by leaning 45 degree into the slot (beware: not straightly on) and each time inserting 1 pair, 4 pair in the same time.
4. Close the cover to connect the wires, and metal cable tie hold tightly with drain wire for completely installation.

DIREKTRONIK

e-mail: info@direktronik.se
tel: 08-52 400 700 fax: 08-520 18121