


# Keystone Jack Installing Instruction

KJ18 Tool Free

1

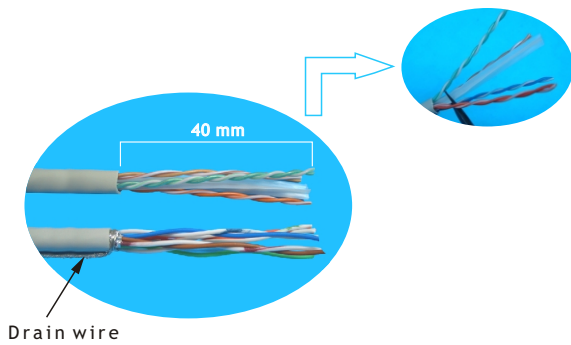

Strip approximately 40mm of the cable jacket, and cut off the plastic cross.

2

## Punchdown Sequences

T568A

Pin 5 White/Blue  
Pin 4 Blue

Pin 1 White/Green  
Pin 2 Green

Pin 3 White/Orange  
Pin 6 Orange

Pin 7 White/Brown  
Pin 8 Brown

T568B


Pin 5 White/Blue  
Pin 4 Blue

Pin 1 White/Orange  
Pin 2 Orange

Pin 3 White/Green  
Pin 6 Green


Pin 7 White/Brown  
Pin 8 Brown

3

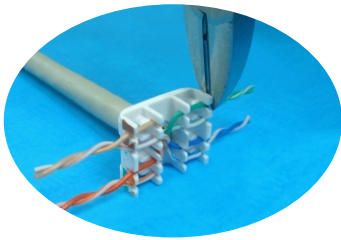


Follow the cap color code to place the wires into the cap slot. Keep the pairs twisted as possible as you can and cut off the surplus wires.

4

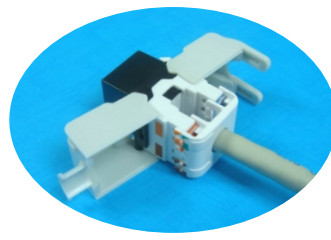


Follow the color sign to put the cap onto IDC.

5

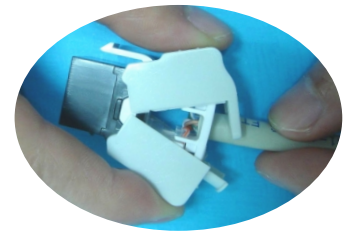


Lock the side caps with "CLICK" means successful connection.

6

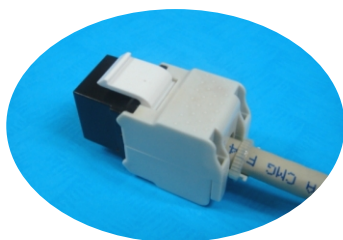

Unshield

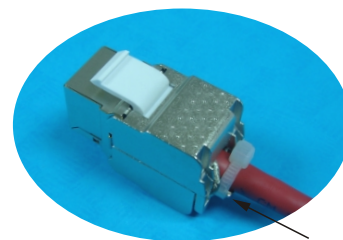

Shielded

connect the drain wire to the shielded shell

Tie up the cable and finish.