



Quick Assembly Connector (QAC/SC) Assembly Manual

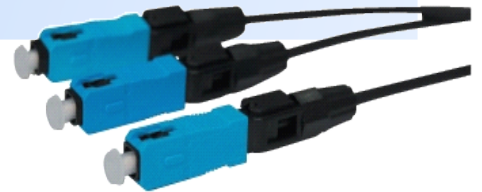


1. Procedure

1

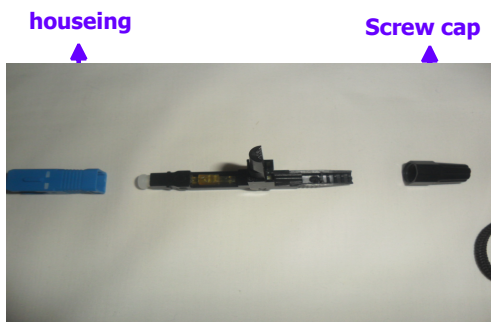


- Arrange for a FAOC to assemble.

2

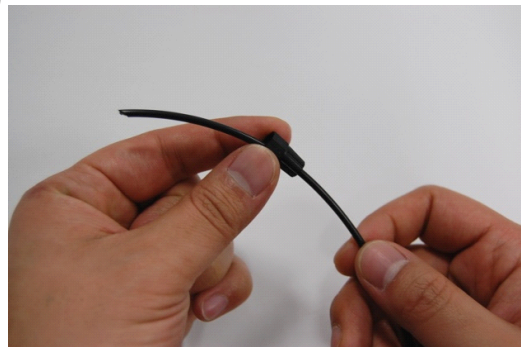


- Insert screw cap into optical cable.

3

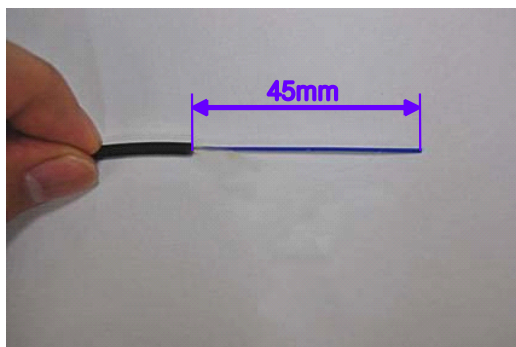

- Strip the coating of optical cable over 45mm.

4

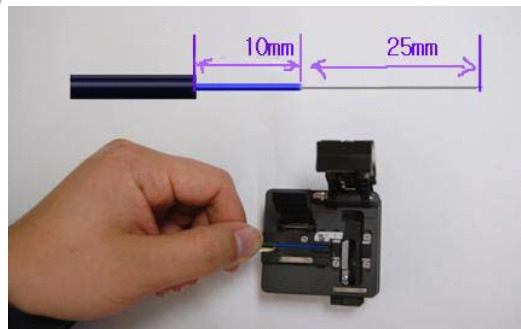


-Cut off the fiber at the length of 25mm using optical fiber cleaver.

5




- Insert optical cable into the fiber guide on the boot. when it is checked the bending of cable as above, stop inserting,

6

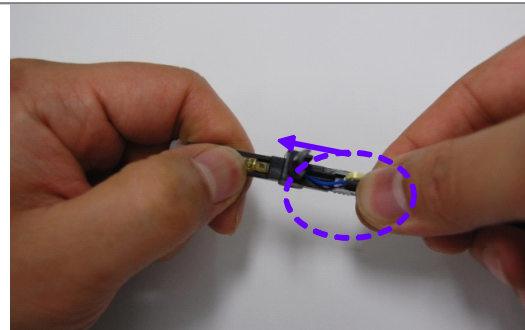


-And maintaining the cable bending with right hand, push the connecting holder forward to the end and fix the fiber.

7

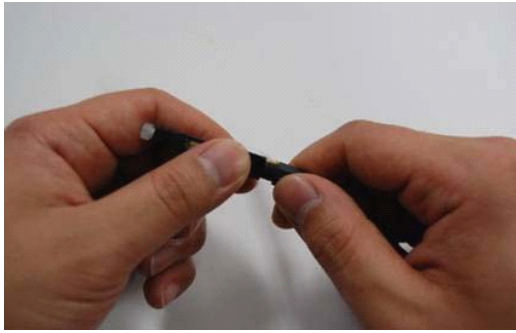

-Take the boot cover down ,connect the screw cap with boot by turning it


8

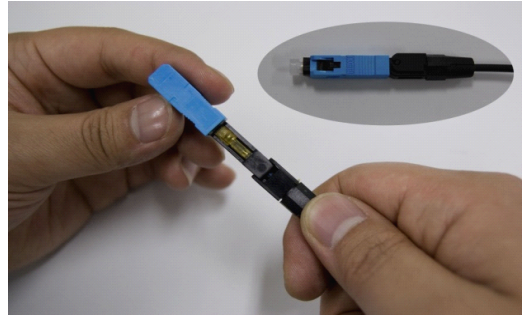

Turn the protrusion of housing toward the bottom and unite it to the body.
- Completion.


2. Reassembling

1

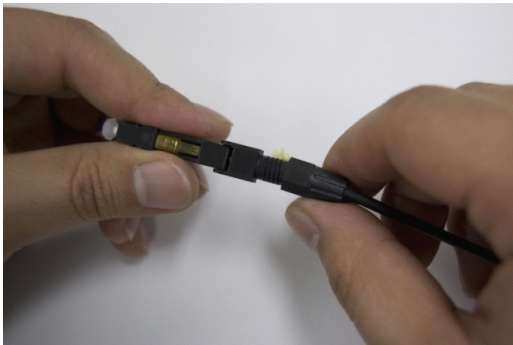

-Pull out the housing and then separate them by turning the screw cap

2

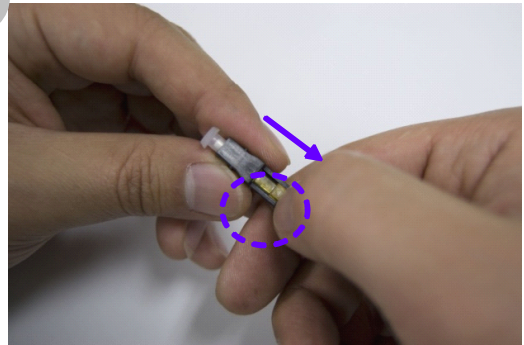

-Pull the fiber connecting holder in reverse with procedure 8. And then, pull out the cable and reassemble.



SC/APC Quick Assmby connector



Tools or kits

※ If you have any questions in assembling , please contact us.