


# 4 Ports MPPT Solar PoE Switch

## Quick Guide

## Overview

Solar PoE Switch integrates a MPPT controller. It can work directly and efficiently in 12V/24V solar power systems. While providing 4 PoE outputs that support the IEEE 802.3 af/at standard, the integrated MPPT controller can keep the PV panels working at their best, effectively improving the conversion efficiency of the PV system. When used in conjunction with IOTgateway, users can remotely view charging status and change charging settings via LINOVISION RemoteMonit Cloud or third-party platforms.

## Package Contents



Switch



DC Extension Cable




Battery Connection  
Extension Cable



Quick Guide

## Solar Interface



Solar Panel Connector  
(MC4)



Battery Connector  
(XT60)




DC 12V output



RS485 Connector

# Solar Installation

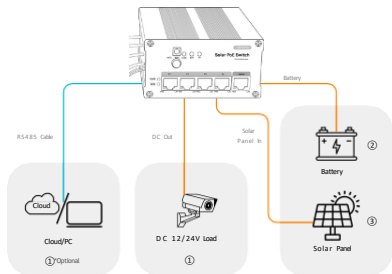

For safety, please follow the installation order shown above:

① Load (optional RS485) > ② Battery > ③ Solar Panel

\*If your battery type is not a 12V LiFePO<sub>4</sub> battery, please complete step ② and then refer to the instructions below under "Battery Type Set Up" before step ③ connecting the solar panel.

## Battery Type Set Up

If you are using a battery other than a 12V LiFePO<sub>4</sub>, configuration is required via a RS485 to USB cable (sold separately) and software on your PC. Please follow the steps below:


A. Download and install the Linovision PC configuration software "LINOVISION Tool Box" from the link provided.

<https://github.com/LINOVISION-CLOUD/Serial-port-application/releases>




Github Link QR Code

B. Connect the RS485 to USB cable, Red wire to terminal A, Blue wire to terminal B. Plug the USB end into your PC, then connect the XT60 interface to the battery.

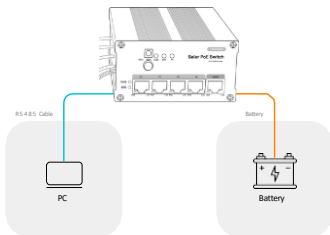

C. Run the "LINOVISION Tool Box". Select the corresponding port. Set the device model to Solar-CMP10A/POE-804G-Solar, then click "Start" and "Config" to enter the configuration interface.

\*If you need to manually configure a 24V battery, please fill in each parameter as if for a 12V system and set the system voltage level to 24V — the system will automatically double the values during actual operation.

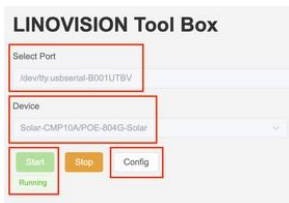

## Battery Type Set Up Reference

- For gel and lead-acid batteries, the POE-SW804G-Solar controller comes with built-in charge curves and 12V/24V auto-detection so only battery type selection is needed.
- For LiFePO<sub>4</sub> and NMC batteries, configuration must be done according to the actual battery specifications. The 24V information is for reference only. When filling in the parameters, you should still enter values based on a 12V system and only change the system voltage level to 24V.

	12V LiFePO <sub>4</sub> (4S)	24V LiFePO <sub>4</sub> (8S)	12V NMC (3S)	24V NMC (7S)
Charging Voltage	14.4V	28.8V	12.6V	29.4V
Charging Current	10.0A	10.0A	10.0A	10.0A
Charging End Current	0.5A	0.5A	0.5A	0.5A
Over-Discharge Voltage	11.2V	22.4V	9.0V	21.0V
Over-Discharge Recovery Voltage	12.3V	23.6V	9.9V	22.2V
Over-Voltage Voltage	15.0V	30.0V	13.0V	30.8V
Float Charge Voltage	14.2V	28.4V	12.3 V	28.7V
Boost Charge Voltage	14.4V	28.8V	12.6V	29.4V
High-Temperature Charge Protection	55°C	55°C	50°C	50°C
High-Temperature Discharge Protection	60°C	60°C	60°C	60°C
Low-Temperature Charge Protection	0°C	0°C	0°C	0°C
Low-Temperature Discharge Protection	-20°C	-20°C	-20°C	-20°C

# Troubleshooting

Symptom	Possible Cause	Corrective Action
PV status indicator LED is off in daylight; load lamp switches on in daylight; load lamp operates for only one night	Photovoltaic module wiring incorrect	Verify and correct the photovoltaic module wiring
Load status indicator LED flashes rapidly; load lamp does not illuminate	Load lamp wiring short-circuited or open-circuited; load lamp defective	Inspect and repair the load lamp wiring; replace the lamp if necessary
Load status indicator LED flashes rapidly; load lamp flickers	The load lamp turns off immediately after lighting, and the load status indicator LED flashes rapidly.	Adjust the consumption of load lamp to the range specified in the controller datasheet
Load status indicator LED flashes slowly	Load power exceeds the controller's rated capacity	Reduce the output current to within the controller's rating
BAT status indicator LED is red; lighting duration is insufficient	Battery deeply discharged ; excessive cable resistance ; battery damaged	Confirm proper charging conditions and remove any shading of the photovoltaic module; shorten or tighten battery cables; replace the battery if required

## Cloud Connection

The POE-SW804G-Solar can be used with a gateway to enable data monitoring on the cloud platform. For details, please refer to the link below.



POE-SW804G-Solar Guide QR Code